


UZ-XL

ASSEMBLY INSTRUCTIONS


The UZ-XL is built for the high capacity demands of schools, orphanages, clinics, and large homes, and will work with almost any piped water system, whether gravity-fed or pressurized. When installing the water filter in your facility, it may be necessary to utilize the services of a local plumber or technician to ensure proper fit and function.

PARTS INCLUDED

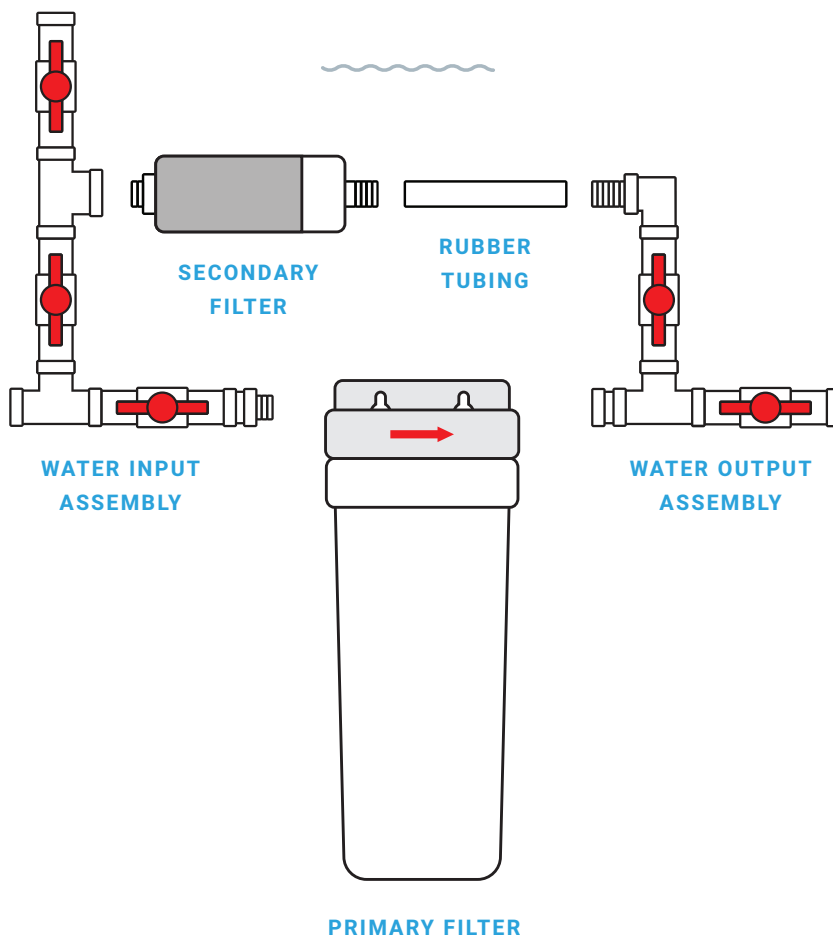


UZ-XL

ASSEMBLY INSTRUCTIONS

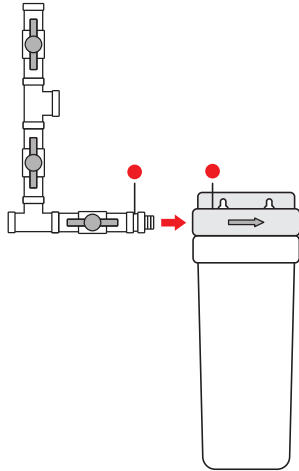


1

Locate red dot on filter input and red dot on water input assembly. Wrap supplied teflon tape around threaded end of water input assembly 2-3 times to prevent leakage, then screw water input assembly onto filter input.

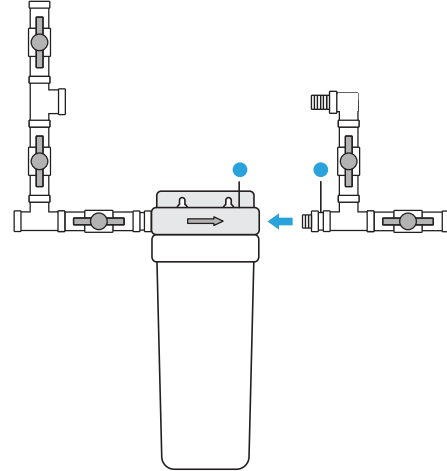


2

Locate blue dot on filter output and blue dot on water output assembly. Wrap supplied teflon tape around threaded end of water output assembly 2-3 times to prevent leakage, then screw water output assembly onto filter output.

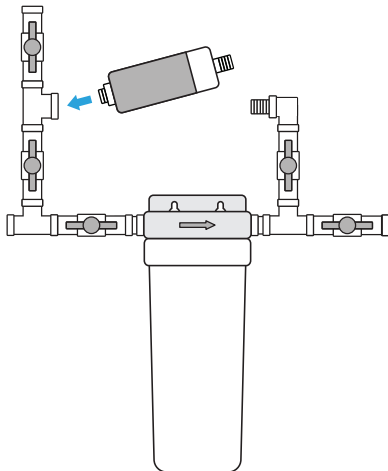

3

Screw secondary filter into the receptacle on the water input assembly.

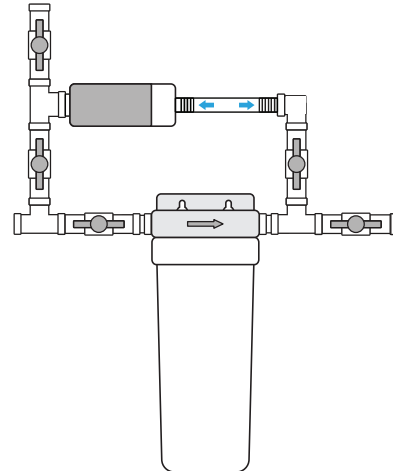

4

Place rubber tubing over barbed end of secondary filter on one end and over barbed nub of the water output assembly on the other end.

* Install completed system after water input from source, but before first water outlet (faucet, valve, etc.).